

FT4



FT4-al with large rocker,
printed

Wireless pushbuttons, 80x80 mm external dimensions, internal frame dimensions 55x55 mm, 15 mm high.

The scope of supply comprises the frame, one large rocker, one double rocker, one intermediate frame (all same colour), the mounting base, the wireless module and one adhesive foil.

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down. Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil FT-KF. Use the sleeves in the 55 mm socket box for screw mounting.

The double rocker is snapped onto the wireless module at the factory. If the double rocker is replaced by a large rocker, remove the rocker halves by pulling off to the front. Do not bend towards the middle. Then snap the large rocker so that the markings O and I on the back line up with the same markings on the wireless module.

Adhesion: First adhere the set *comprising the mounting base, frame and intermediate frame* - with the latches pointing at the top and bottom. Then snap on the set *comprising the wireless module and rocker* - with the marking O on the back always pointing up.

Before screwing, remove the mounting base from the frame and the intermediate frame. To do this, press the latches on the mounting base outwards. Then screw the mounting base - with the latches at top and bottom -, snap on the frame and snap on the set *comprising the wireless module and rocker* - with the marking O on the back always pointing to the top.

The Eltako frame can be replaced on installation at any time by a design frame with internal dimensions 55x55 mm from manufacturers Berker, Elso, Gira, Hager, Jung or Merten. In particular when multiple frames are necessary.

For a list of compatible design frames look here.

Currently supplied colours of the wireless pushbuttons FT4 and ordering abbreviations:



Available for colour combinations or with imprints in addition to the wireless switches:

Rockers **W** and double rockers **DW** each available **unprinted** in packs of 5 in colours eg, ws, sz, rw, an, wg, sg and al.

Frames **R** each available in packs of 5 in the colours eg, ws, sz, rw, an, wg, sg and al.

Rockers **W** and **DW** (double rockers) are available with **print or laser engraved** in packs of 5 in all colours.

Additional nomenclature in each case: for one top arrow (UP) and one bottom arrow (DOWN):

+2P; for 0 (= OFF) on upper part and I (= ON) on bottom part: **+OI**. The intermediate frames **ZR** each available in packs of 5 in the colours eg, ws, sz, rw, an, al and also vapour-deposited with gold go, aluminium am, copper ku and platinum pl.

FT4-eg	Wireless pushbutton electric grey	EAN 4010312 300381	41,10 €/pc.
FT4-ws	Wireless pushbutton white	EAN 4010312 300121	41,10 €/pc.
FT4-sz	Wireless pushbutton black	EAN 4010312 300442	48,80 €/pc.
FT4-rw	Wireless pushbutton pure white	EAN 4010312 300350	48,80 €/pc.
FT4-an	Wireless pushbutton anthracite	EAN 4010312 300817	48,80 €/pc.
FT4-wg	Wireless pushbutton pure glossy	EAN 4010312 300459	48,80 €/pc.
FT4-sg	Wireless pushbutton black glossy	EAN 4010312 300466	48,80 €/pc.
FT4-al	Wireless pushb. coated with aluminium paint.	EAN 4010312 300138	48,80 €/pc.
W- or R-	5 rockers or 5 frames	colours: eg, ws, sz, rw, an, wg, sg, al	8,30 €/pc. 11,20 €/pc.
DW-	5 double rockers	colours: eg, ws, sz, rw, an, wg, sg, al	11,70 €/pc. 14,90 €/pc.
W+2P and W+OI	5 rockers printed	colours: eg, ws, sz, rw, an, wg, sg, al	9,90 €/pc. 12,80 €/pc.
DW+2P and DW+OI	5 double rockers printed	colours: eg, ws, sz, rw, an, wg, sg, al	12,80 €/pc. 16,90 €/pc.
ZR-	5 intermediate frames	colours: eg, ws, sz, rw, an, al, go, am, ku, pl	8,30 €/pc. 12,90 €/pc. 16,60 €/pc.