



30 100 867 - 4

Wireless DALI gateway FDG71L-230V

Only skilled electricians may install this electrical equipment otherwise there is the risk of fire or electric shock!

Temperature at mounting location:
-20°C up to +50°C.
Storage temperature: -25°C up to +70°C.
Relative humidity:
annual average value <75%.

valid for devices from production week 30/19 (see bottom side of housing)

Wireless DALI gateway, bidirectional.
2 watt standby loss.
Installation for example in suspended ceilings and lamps. 252 mm long, 46 mm wide and 31 mm high. With cable fixation.
Power supply 230 V at terminals N and L.
16 V DC/130 mA can be connected to the DALI terminals +/- for up to 64 DALI devices.
The gateway FDG71L controls DALI devices with EnOcean wireless transmitters.
Groups 0-15 can be controlled and the **broadcast command** can be sent. In addition **DALI scenes 0-15** can be controlled.
DALI installations, which are to be fully controlled with the FDG71L, must be configured in groups 0-15.

The DALI components can be configured with the configuration software DALI-Cockpit or DALI-Monitor and the DALI interfaces DL-USB mini or DL-Flash-USB.
The FDG71L internally saves the dimming value for each of the groups 0-15 and supplies this value as feedback. The same feedback telegrams are generated as for an FUD71.
The feedbacks of the device addresses correspond to the dimming values of the DALI groups 0-15 in ascending order.
Feedbacks can be converted by the PCT14 for each individual group of dimming value telegrams (%) to pushbutton telegrams (ON/


OFF). Feedbacks can then control actuators. The FDG71L fulfils the functions of the DALI master and the DALI power supply.

Important: Wireless pushbuttons always need to be double-clicked when they are taught-in manually in the FDG71L. CLR only needs a single click.

A direction pushbutton or universal pushbutton with identical ID and identical pushbutton cannot be taught in several times in different groups. The group last selected is always valid. Therefore, a pushbutton can either switch only one group or broadcast to all groups.

One FBH per group can also be taught in. With a manual teach-in this always acts dependent on brightness. With PCT14 you can also set the brightness threshold.
The delay time for switch-off after no motion is detected can be set together in minutes (1.. 60) for the FBH devices of all groups. The default is 3 minutes.

Function rotary switches

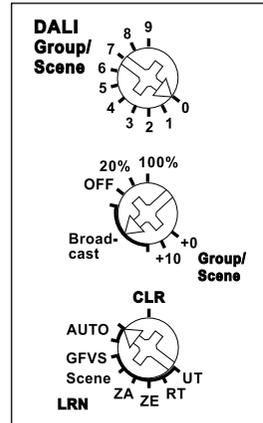

Operation: After switching on the power supply, the complete DALI bus is scanned and the red LED on the FDG71L flickers for several seconds. All DALI devices present will be recognized with their short address and following adjustments will be read: MIN Level, Dimmspeed (fade rate & fade time) and group affiliation. The least possible minimum brightness is determined from this data and the dimming speed for groups 0...15. All DALI devices in a group must have the same dimming speed, so each group can be dimmed at an individual speed. The

allowable range for the FADE RATE is 16 to 179 steps per second. The FADE TIME must be set to a value higher than 0.7s. The DALI scan must be performed each time a change of the settings has been made. For this, the lower rotary switch of the FDG71L must be set to AUTO again.

Test function:
Turn the middle rotary switch to 100 % = all DALI operating devices switch on at 100 %.
Turn to 20 % = all DALI operating devices switch on at 20 %.
Turn OFF = all DALI operating devices switch off.

Universal pushbutton: Switch on and off or dim up and down, the direction change is made by a short release of the pushbutton.

Direction pushbutton: 'Switch on and dim up' on one side and 'Switch off and dim down' on the other side.

A double-click on the switch-on side activates automatic dim-up to full brightness at dim speed.

ZE: Switches on at maximum brightness (100 %). A dimming value in % can be defined with PCT14.

ZA: Switches off. 'Soft OFF' can be deactivated with PCT14.

Rotary switch: press or turn to switch on. Dim up by turning to the right of turn to the left to dimm down. Press to switch off. A broadcast is not possible.

White tone and intensity double rocker switch (selectable with PCT14)

The left-hand rocker changes the colour temperature. Press top for cool white and bottom for warm white. The right-hand rocker changes the intensity: top for brighter, bottom for darker.

FBH: A wireless motion detector and brightness sensor FBH can be taught-in. It is only evaluated as a motion detector. A brightness threshold at which the lighting is switched on dependent on the brightness (in addition to motion) can be defined with PCT14. If no motion is detected, switch-off takes place after 3 minutes. The switch-off delay can be set between 1 and 60 minutes.

Via PCT14, it's possible to set a time which the FBH is blocked for a selected time after a manual switching action via pushbutton. With a short press on the on side of a direction pushbutton, the FBH will be activated again.

Constant lighting control with FHD65SB:

The automatic brightness control switches on automatically once the FHD65SB is taught in. The required brightness is set using a pushbutton and the first brightness value then received from the FHD65SB becomes the target brightness. This is kept constant automatically by the FDG by incoming brightness values from the FHD65SB. After every change in brightness (dimming) by the pushbutton, the brightness value then received from the FHD65SB becomes the new target brightness. If the target brightness is set by the PCT14 or saved with a 'direction pushbutton for target brightness', it then becomes permanent. A change in brightness by pushbutton is then overridden by the permanently set target brightness. If an FBH is also taught in, the light is switched on in case of motion detection and undershot target brightness and switched off in case of no motion detection or exceeded target brightness. Switching off by pushbutton deactivates automatic control by FBH or FIH. Central pushbutton, scene pushbutton and dimming values by PC also result in deactivation.

Automatic control is reactivated by briefly pressing the pushbutton on the switch-on side of the direction pushbutton.

Save target brightness: Press top of direction pushbutton for target brightness. The current brightness sent by FIH65B is saved.

Clear target brightness: Press bottom of direction pushbutton for target brightness.


FTK: When the window is opened, the light switches on at maximum brightness (100 %). When the window is closed, the light switches off.

GFVS: With a dimming value telegram for one group, the blocking bit only acts on the group pushbutton for this group. With Broadcast, you can still change the group. With a dimming value telegram for all groups (Broadcast), the blocking bit only acts on the Broadcast pushbutton. You can still change the groups using group pushbuttons.

The red LED lights up when a wireless signal is received.

The green LED lights up when a confirmation signal is received.

Typical connection

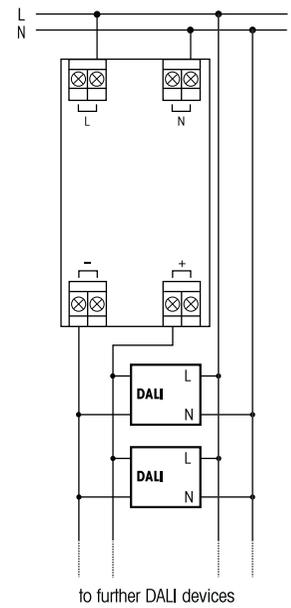

Teaching-in wireless sensors in wireless actuators

All sensors must be taught-in in the actuators so that they can detect and execute commands.

Teaching-in FDG71L-230 V

The teach-in memory is clear on delivery from the factory. To ensure that a device was not previously taught-in, **clear the complete memory:**

Turn the lower rotary switch to CLR. The red LED flashes at a high rate. Within 10 seconds, turn the upper rotary switch three times to right stop (turn clockwise) and back again. The LED stops flashing and goes out after 2 seconds. All taught-in sensors are cleared.

Clear single taught-in sensors in the same way as in the teach-in procedure, except that you set the lower rotary switch to CLR. The LED previously flashing at a high rate goes out.

Clear device configuration: Set the lower rotary switch to CLR. The red LED flashes at a high rate. Within the next 10 seconds, turn the upper rotary switch six times to left stop (turn anti-clockwise) and away again. The LED

stops flashing and goes out after 5 seconds. The factory settings are restored.

Teaching-in sensors:

1. Turn the middle rotary switch to +0 = group 0 to 9 or turn to +10 = group 10 to 16 or turn to Broadcast = Broadcast
2. Turn the upper rotary switch to the required group 0 to 9, e.g. middle +0 and upper 9 = group 9 or middle +10 and upper 6 = group 16
3. Set the lower rotary switch to the required teach-in function. The red LED flickers at a low rate.

UT = Teach in universal pushbutton
RT = Teach in direction pushbutton, direction pushbuttons are automatically taught-in fully when pressed.

Depending on where the button is pressed, the functions for switch-on and dim-up are defined on one side and switch-off and dim-down on the other side.

ZE = teach in 'central on'

ZA = teach in 'central off'

Scene = pushbutton for DALI scene recall (with the upper and middle rotary switch, the required DALI Scene 0..15 is selected); teach in FBH, FHD65SB and FTK. GFVS = Teach-in GFVS and rotary switch, during teaching-in, confirmation telegrams are activated and a confirmation telegram is automatically sent.

Teach-in 4-way light scene pushbutton (the middle rotary switch must be set on +0) or white tone and intensity double rocker switch (the middle rotary switch must be set on broadcast), a complete switch with double rocker is automatically assigned.

4. Quickly confirm the pushbutton to be taught-in by pressing it 2x in a row ('double-click'). The LED goes out.

A pushbutton (rocker end) can not be taught in several groups.

To teach-in further sensors, turn the lower rotary switch briefly away from its position. Continue the procedure from pos 1.

After teach-in, set the lower rotary switch to AUTO and the middle rotary switch to Broadcast.

Saving light scenes

Up to four brightness values can be saved using a 4-way light scene pushbutton.

1. Set the required brightness value using a previously taught-in pushbutton or the GFVS.
2. Within 60 seconds, press one of the four rocker ends of the previously taught-in light scene pushbutton for longer than 3 seconds but less than 5 seconds to save the brightness value.
3. To save other light scenes, repeat from point 1.

Retrieving light scenes

Up to four brightness values are retrievable using a 4-way light scene pushbutton:

pushbutton with double rocker;
top left = light scene 1 (ex factory 30 %), top right = light scene 2 (60 %),
bottom left = light scene 3 (100 %) and bottom right = light scene 4 (0 %).

With PCT14, the brightness value of the 4 light scenes for groups 0-15 can be changed. If MASK is chosen for a scene, than this group stays unchanged at scene's call.

Switch-on confirmation telegrams:

On delivery ex works the confirmation telegrams are switched off. Set the lower rotary switch to CLR. The red LED flashes nervously. Now within 10 seconds turn the upper rotary switch 3 times to the left (anticlockwise) and then back away. The red LED stops flickering and goes out after 2 seconds. The confirmation telegrams are switched-on.

Switch-off confirmation telegrams:

Set the lower rotary switch to CLR. The red LED flashes nervously. Now within 10 seconds turn the upper rotary switch 3 times to the left (anticlockwise) and then back away. The red LED goes out immediately. The confirmation telegrams are switched-off.

Configure FDG14: The following points can be configured using the PC PCT14 tool (from version 8.1):

1. Turn off the power supply of the FDG71L
2. Plug-in the DAT71
3. After about 10s., the red LED of the FDG71L goes off
4. PCT14: 'connect'
5. Configure the FPLG71L with PCT14;


Following can be changed:

- Parameters for FBH
 - Parameters for FIH65B or FHD65SB
 - Light scenes in %
 - Dimming value in % for one pushbutton
 - Dimming value in % for Central 'ON' (DIRECT ARC POWER)
 - Central 'ON' without 'soft ON' (RECAL MAX LEVEL)
 - White tone and intensity double rocker switch (DT8 Tuneable White)
6. PCT14: 'disconnect'
 7. Unplug the DAT71
 8. Turn on the power supply of the FDG71L



When an actuator is ready for teach-in (the LED flashes at a low rate), the very next incoming signal is taught-in. Therefore, make absolutely sure that you do not activate any other sensors during the teach-in phase.

Cable fixation

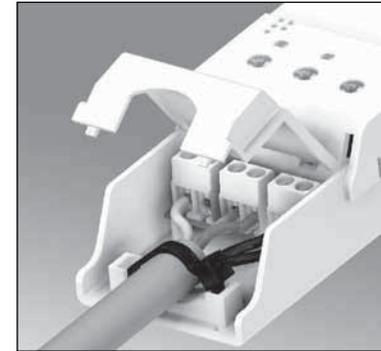

The cable must be fastened with standard cable ties (width <3.6 mm).

DALI-System

In the system the DALI Gateway acts as a central control component (master controller), which also ensures the power supply of the DALI interface. The DALI devices, eg. DALI ballasts, operate as command receiver (slave), which only return states or status messages to the master upon request. It is solely the task of the DALI Gateway to send commands received via wireless control to the DALI line and to control the devices. The use of other DALI control components in multi-master mode, eg an additional DALI center, a DALI potentiometer or mains voltage pushbuttons, are unnecessary and may lead to malfunctions in the DALI system in some cases. For this reason it is necessary to remove other components of the system - especially when retrofitting existing DALI installations.



enocean®

THE UNIQUE WIRELESS PROFESSIONAL
SMART HOME STANDARD

Frequency	868.3 MHz
Transmit power	max. 10 mW

Hereby, Eltako GmbH declares that the radio equipment type FDG71L-230V is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: eltako.com

Must be kept for later use!

Eltako GmbH

D-70736 Fellbach

Technical Support English:

☎ +49 711 94350025

✉ technical-support@eltako.de

eltako.com

03/2022 Subject to change without notice.