



Wireless actuator  
for shading elements and  
roller shutters FSB61NP-230V

**Only skilled electricians may install  
this electrical equipment otherwise  
there is the risk of fire or electric  
shock!**

Temperature at mounting location:  
-20°C up to +50°C.  
Storage temperature: -25°C up to +70°C.  
Relative humidity:  
annual average value <75%.

**valid for devices from production week  
36/19** (see bottom side of housing)

1+1 NO contact not potential free  
4A/250V AC, for roller blinds and  
shading systems. Encrypted wireless,  
bidirectional wireless and repeater  
function are switchable. Only 0.9 watt  
standby loss.

For installation.  
45 mm long, 45 mm wide, 33 mm deep.  
Supply voltage, switching voltage and  
control voltage local 230V.

If a power failure occurs, the device is  
switched off in a defined sequence.


In addition to the wireless control input  
via an internal antenna, this wireless  
actuator can also be controlled locally  
by a conventional 230V control push-  
button mounted upstream. Glow lamp  
current is not approved.

From production week 36/19, a direction  
pushbutton for 'down' can be connected  
via the diode RTD (any polarity). Another  
direction pushbutton for 'up' is connected  
directly to A1. On the first control pulse  
'down', EGS61Z switches over the control  
input A1 to 'direction pushbutton'. To  
switch the control input back to 'universal  
pushbutton', briefly switch off the power  
supply and switch back on.

**You can teach in encrypted sensors.**  
You can switch on **bidirectional wireless**  
and/or a **repeater** function.

Every change in state and incoming cen-  
tral command telegrams are confirmed  
with a wireless telegram by bidirectional  
wireless. This wireless telegram can be  
taught-in in other actuators, in the GFVS  
software and in universal displays.

### Function rotary switches

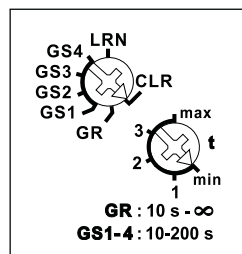

**With the top rotary switch** in the setting  
LRN up to 35 wireless pushbuttons can  
be assigned therefrom one or more  
central pushbuttons. The required function  
of this impulse group switch can then be  
selected:

**GS1** = Group switch with pushbutton  
control and off delay in seconds.  
Compatible with universal pushbutton  
up-stop-down-stop as well as with  
direction pushbutton. With pressing 'Up',  
the switch position Up is activated. With  
pressing 'Down', the switch position  
Down is activated. The next pulse in the  
same direction interrupts the sequence  
immediately. However, a pulse in the  
opposite direction stops and then swit-  
ches over to the opposite direction after a  
pause of 500ms.

**Dynamic central control with and with-  
out priority can be implemented:** The  
switch position 'Up' at the top or 'Down'  
at the bottom are activated specifically  
by a control signal < 2 seconds from a  
pushbutton taught-in as a central control  
switch.

**Dynamic central control with priority:**  
The switch position 'Up' or 'Down' and the  
priority are activated specifically by a  
control signal > 2 seconds and  
< 10 seconds from a pushbutton taught-in  
as a central control switch. With priority  
because these control signals cannot be  
overridden by other control signals **until**  
the central command is again cancelled  
by a gate pulse 'Up' or 'Down' from the

central control switch.

The switch position 'Up' or 'Down' and  
the priority are activated specifically by  
a control signal > 10 seconds, e.g. from  
a central control switch FSM61.

With priority because these control  
signals cannot be overridden by other  
control signals **until** the central  
command is again cancelled by the end  
of the control signal.

**GS2** = Group switch same as GS1, central  
switch always without priority.

**GS3** = Group switch same as GS2, **in  
addition with double-click reverse  
function** for the local pushbutton and a  
wireless pushbutton as universal switch  
taught-in appropriately: After double-  
clicking, the Venetian blind moves in  
the opposite direction until it is stopped  
by a brief tap.

**GS4** = Group switch same as GS2, **in  
addition with tip reverse function:** The  
control pushbutton is initially in static  
mode. The relay is energised as long as  
the pushbutton is tapped so that the  
Venetian blind can be reversed in the  
opposite direction by short impulses.

When tapped, the direction switch moves  
the Venetian blind in the corresponding  
direction. The universal switches move  
opposite to the previous direction. If the  
pushbutton remains closed a little longer,  
the relay switches over to dynamic  
mode and the relay remains closed to  
close or open the Venetian blind, even if  
the pushbutton is open before the end  
of the movement. A brief tap interrupts  
this process immediately.

**GR** = Group relay. As long as the wire-  
less pushbutton is closed, a contact is  
closed. Then it reopens. On reception of  
the next wireless signal the other contact  
closes, etc. A mandatory pause of  
500ms is maintained after a contact  
change. A local 230V control push-  
button initiates the same function. Only  
for wireless: the control signal 'Central  
up' closes Contact ▲ and 'Central  
down' closes Contact ▼ as long as the  
pushbutton is closed. When the bottom  
rotary switch is in position 'max', no  
time delay is activated at GR (time delay  
time = ∞). A time delay of 10 to 200

seconds is adjustable between rotary  
switch positions 'min' and shortly before  
'max'. This opens the closed contact  
automatically on expiry of the time  
delay, even if the switch is still closed.

**Use the bottom rotary switch** to set the  
time delay to the position 'Halt' in  
seconds. Select a delay time that is at  
least as long as the shading element or  
roller shutter needs to move from its  
end position to the other position.

### Shading scene control:

Up to 4 saved 'Down' running times are  
retrievable using the control signal of a  
pushbutton and double rocker taught-in  
as a **scene button** or taught-in by a PC  
loaded with the GFVS software. If this  
was not the last function anyway, the  
shading element is first moved 'Up' at  
the RV delay time programmed by the  
bottom rotary switch to ensure a safe  
starting position. The device then  
switches over automatically to 'Down'  
and stops on expiry of the saved time.  
A move command is started only for the  
first time for scenes with RV time (fully  
'Up' or 'Down').

**For control via the GFVS software**, up  
and down commands can be started  
with an exact running time. The actuator  
sends after every motion the exact run-  
ning time, also after a command by  
pushbutton, by this way the GFVS soft-  
ware displays always the current posi-  
tion. At reaching the end position up or  
down, the position is automatically  
synchronized.

If a **wireless outdoor brightness sensor  
FAH60** is also taught-in in addition to a  
scene pushbutton, the taught-in scenes  
1, 2 and 4 are executed automatically  
depending on the outdoor brightness:  
Scene 1 in direct sunlight (> 25 kLux),  
Scene 2 in daylight (300 Lux to 25 kLux)  
and Scene 4 in darkness (1-30 Lux).  
During the first teach-in, therefore, a  
scene pushbutton is assigned automati-  
cally to Scenes 1 = no function, 2 =  
raise fully and 4 = lower fully. Scene 1  
must be taught-in separately if the FAH60  
is to trigger a shading system when  
direct sunlight is detected. A taught-in  
Scene 3 is only retrievable by means of  
a scene pushbutton.

Scenes 2 and 4 can be changed separately at any time. However, this is not advisable if the right rocker is programmed to be used as a normal up/down shutter pushbutton or an FAH60 was taught-in.


FAH60 wireless telegrams for Scenes 1 = direct sunlight are executed immediately and 4 = darkness. Three telegrams are required for Scene 2 = daylight in order to mask out interference lights. To prevent 'nervous' opening and closing of a shading element when there is rapid fluctuation between darkness and brightness, changing FAH60 wireless telegrams are only executed every 2 minutes.

The automatic systems can be cancelled or overridden at any time by confirming any one of the taught-in pushbuttons. Central pushbuttons always have priority.


**When you teach in an FTK wireless window/door contact or a Hoppe window handle,** a lock out protection is set when doors are opened to prevent Central Down and Scene Down.

**The LED** performs during the teach-in process according to the operation manual. It shows wireless control commands by short flickering during operation.

### Typical connection UT

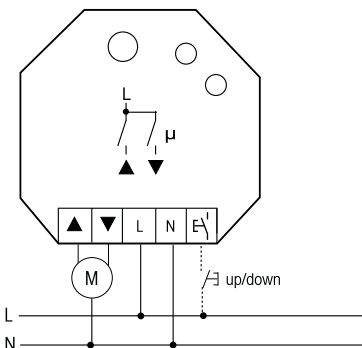

### Typical connection RT

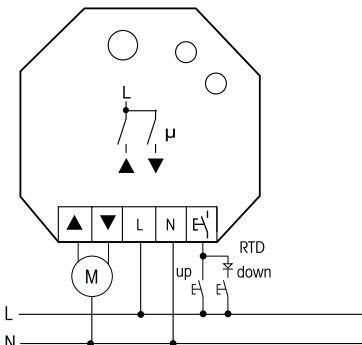

### Teaching-in wireless sensors in wireless actuators

**All sensors must be taught-in in the actuators so that they can detect and execute commands.**

### Teaching-in actuator FSB61NP-230V

The teach-in memory is empty on delivery from the factory. To ensure that a device was not previously taught-in, **clear the memory completely:** Turn the upper rotary switch to CLR. The LED flashes at a high rate. Within 10 seconds, turn the lower rotary switch three times to right stop (turn clockwise) and back again. The LED stops flashing and goes out after 2 seconds. All taught-in sensors are cleared; the repeater and the confirmation telegrams are switched off.

### Clear single taught-in sensors:

Turn the upper rotary switch to CLR. The LED flashes at a high rate. Operate the sensor. The LED goes out.

If all the functions of an encrypted sensor are cleared, teach-in must be repeated as described under *Teach-in encrypted sensors*.

### Teaching-in sensors:

1. **Setting of the lower rotary switch** to the desired teaching-in function:

The flashing of the LED as soon as a new setting range has been reached when turning the rotary switch helps to find the desired position reliably.

**Left stop min** = teach-in direction switch top 'UP' and bottom 'DOWN' or 'hold' in both cases;

Direction switches are completely taught-in automatically when operating the top or bottom pushbutton. Otherwise top and bottom must be taught-in in the same way if the top and bottom pushbutton are to have the same function.

**Position 1** = teach-in 'central DOWN';

**Position 2** = teach-in universal switch 'DOWN-HOLD-UP-HOLD' and window/door contact FTK;

**Position 3** = teach-in 'central UP';

**Right stop max** = scene button; When a FAH60 is taught-in, the position of the lower rotary switch determines the threshold at which scene 4 is called. 'min' = total darkness to 'max' = start of twilight.

The GFVS teach-in telegram 0xE0400D80 can be taught-in in any position. The confirmation telegrams are hereby automatically activated.

2. **Set the upper rotary switch** to LRN. The LED flashes at a low rate.
3. **Operate the sensor which should be taught-in.** The LED goes out.

To teach-in further sensors, turn the upper rotary switch briefly away from position LRN. Continue the procedure from pos 1.

After teach-in, set the rotary switches of the actuators to the required function.

**To prevent unintentional teach-in, teach in pushbuttons by 'double-clicking' (pressing rapidly twice in succession).**

Within 2 seconds, turn the upper rotary

switch three times to right stop LRN (turn clockwise). The LED flashes 'double'. 'Double-click' the pushbutton you want to teach in. The LED goes out.

To change back to teach-in with a 'single click', turn the upper rotary switch 3 times to right stop LRN (clockwise) within 2 seconds. The LED flashes at a low rate.

After a power supply failure, the device reverts automatically to teach-in with a 'single click'.

You can teach in unencrypted and encrypted sensors.

### Teach in encrypted sensors:

1. Turn the upper rotary switch to LRN.
2. Turn the lower rotary switch three times to left stop (anticlockwise). The LED flashes very rapidly.
3. Within 120 seconds, enable sensor encryption. The LED goes out. Caution: Do not switch off the power supply.
4. Then teach in the encrypted sensor as described in *Teach in sensors*.

To teach in other encrypted sensors, turn the upper rotary switch briefly away from position LRN and then turn it to 1. With encrypted sensors, use the 'rolling code', i.e. the code changes in each telegram, both in the transmitter and in the receiver.

If a sensor sends more than 50 telegrams when the actuator is not enabled, the sensor is no longer recognised by the enabled actuator and you must repeat teach-in as 'encrypted sensor'. It is not necessary to repeat the function teach-in.

### Teaching-in shading scenes:

The following scenes are saved in scene pushbuttons that are taught-in in fully automatic mode, as described above. 1 = No function; 2 = Raise fully; 3 = No function, and 4 = Lower fully. Scenes 1 and 3 may have to be taught-in separately. Scenes 2 and 4 may also be changed separately. However, this is not advisable if the right-hand rocker is programmed to be used as a normal

up/down shutter pushbutton or an FAH60 was taught-in.

**Individual teach-in:** Start 'Down' from the top end position with an already taught-in universal or direction switch. The point of time of repressing the pushbutton then determines the function which can **then** be taught-in in the scene pushbutton:

- a) Press the pushbutton immediately to cancel another function that is saved.
- b) Press the pushbutton after approx. 1s to trigger the standard function 'Up'.
- c) Press the pushbutton after more than 2s, but shorter than the RV time setting to trigger the function 'Stop after this time' for shading purposes.
- d) Do not press pushbutton any more and wait until the RV time has expired. This triggers the standard function 'Down'.

**The teach-in the scene pushbutton:**

Press the required double rocker end for approx. 3s but not longer than 5s. Then open the shading element fully by pressing the universal or direction switch and continue as described above for other scenes.

**Switching on/off repeater:**

If control voltage is applied to the local control input when the power supply is switched on, the repeater is switched on/off. When the power supply is switched on, the LED lights up for 2 seconds = repeater off (as-delivered state) or 5 seconds = repeater on to indicate the state.

**Switch-on confirmation telegrams:**

For deliveries ex-works the confirmation telegrams are switched-off. Set the upper rotary switch to CLR. The LED flashes nervously. Now within 10 seconds turn the bottom rotary switch 3 times to the left (anticlockwise) and then back away. The LED stops flashing and goes out after 2 seconds. The confirmation telegrams are switched-on.

**Switch-off confirmation telegrams:**

Set the upper rotary switch to CLR. The LED flashes nervously. Now within 10 seconds turn the bottom rotary switch

3 times to the left (anticlockwise) and then back away. The LED goes out immediately. The confirmation telegrams are switched-off.

**Teaching-in feedback of this actuator in other actuators or GFVS software:**

For raising and lowering and simultaneously transmitting of feedback the local control input has to be applied. The corresponding feedback will be sent when reaching the end position top or bottom after the set RV time at the device.

**Teaching-in feedback of other actuators in this actuator:**

'Raising' will be taught-in in position 'central up'. 'Lowering' will be taught-in in position 'central down'. After teach-in the function and desired off-delay will be set.



When an actuator is ready for teach-in (the LED flashes at a low rate), the very next incoming signal is taught-in. Therefore, make absolutely sure that you do not activate any other sensors during the teach-in phase.

**EnOcean wireless**

Frequency	868.3 MHz
Transmit power	max. 10 mW

**Hereby, Eltako GmbH declares that the radio equipment type FSB61NP-230V is in compliance with Directive 2014/53/EU.**

**The full text of the EU declaration of conformity is available at the following internet address: [eltako.com](http://eltako.com)**

**Must be kept for later use!**

We recommend the housing for operating instructions GBA14.

**Eltako GmbH**

D-70736 Fellbach

**Technical Support English:**

☎ Michael Thünte +49 176 13582514

✉ [thunte@eltako.de](mailto:thunte@eltako.de)

☎ Marc Peter +49 173 3180368

✉ [marc.peter@eltako.de](mailto:marc.peter@eltako.de)

[eltako.com](http://eltako.com)