



30 055 769 - 3

**Wireless sensor****Wireless temperature sensor  
FTR55EHB-**

Temperature at mounting location:  
-20°C up to +50°C.  
Storage temperature: -25°C up to +70°C.  
Relative humidity:  
annual average value <75%.

**valid for devices from production week  
27/23** (see bottom side of housing)

**Wireless temperature controller for single  
mounting 80x80x27 mm or mounting into  
the E-Design55 switching system. With  
battery (lifetime 4 years). Smart Home  
sensor.**

The temperature controller can be taught in  
in the actuators heating/cooling relay FHK  
or FR62 and Professional Smart Home  
controllers.

The temperature controller sends a message to  
the Eltako Wireless Building system when  
a change of min. 0.15°C occurs in the actual  
or setpoint temperature within 60 seconds.  
If no change occurs, a status message is  
sent every 5 minutes.

A jumper defines the function mode. In the  
mode TF only ON or OFF are sent, in the mode  
FHK the measured and set temperature are  
sent.

Measurement accuracy is approx. 1°C.

The **reference temperature** that ranges  
from +12°C to +28°C is changed using the  
hand wheel.

In the  position, the set temperature is  
8°C (frost protection).

We recommend stainless-steel countersunk  
2.9x25 mm, DIN 7982 C, for screw connections.  
Both with rawl plugs 5x25 mm and with  
55 mm switch boxes.

2 internal 3V CR1632 button cells are supplying  
the power for several years.

To replace the button cell, all you need to do  
is remove the front panel.

**Only install on a flat surface:**

Screw on mounting plate. Then snap on  
frame. Remove battery insulation and snap  
on front panel.

**Select operating mode:**

In as-delivered state (both slide switches  
up), **operating mode FHK** is active.

If the left slide switch is pushed down to  
position TF, the system switches over to **TF  
mode**.

**Send teach-in telegram:**

In order to teach the temperature controller  
into a ready to teach-in actuator,  
the front panel must be removed. Press  
briefly the LRN pushbutton which is then  
accessible.

After the temperature controller is  
taught in to a FR62 device, the teach-in  
mode ends and locks automatically.

**Unlock teach-in mode of FR62 with  
FTR55EHB-:**

1. Slide the right slide switch down to the  
Mode 2 position.
2. Switch off/on power supply of FR62.
3. Press briefly LRN pushbutton.
4. Slide the right slide switch up again.

Operating mode TF: EEP: A5-38-08

Teach-in telegram: 0xE0400D80

Data telegram: OFF = 0x01000008

ON = 0x01000009

Hysteresis: 1°

Operating mode FHK: EEP: A5-10-06

Teach-in telegram: 0x40300D87

Data\_byte2 = reference temperature 12°C  
to 28°C, frost symbol = 8°C

Data\_byte1 = actual temperature 0 to 40°C.

**The crossed-out waste container  
indicates that batteries may not be  
disposed with other household or  
commercial waste.**



**Attention: Danger of explosion if  
battery is replaced improperly.  
Only replace it by an equivalent  
type!**

**Manuals and documents in further  
languages:**



<http://eltako.com/redirect/FTR55EHB->



**enocean®**

THE UNIQUE WIRELESS **PROFESSIONAL  
SMART HOME STANDARD**

Frequency 868.3 MHz

Transmit power max. 10 mW

**Hereby, Eltako GmbH declares that the radio  
equipment type FTR55EHB- is in com-  
pliance with Directive 2014/53/EU.**

**The full text of the EU declaration of con-  
formity can be accessed via the QR code or  
the internet address under 'Documents'.**

**Must be kept for later use!**

**Eltako GmbH**

D-70736 Fellbach

**Technical Support English:**

 +49 711 943 500 25

 [technical-support@eltako.de](mailto:technical-support@eltako.de)

[eltako.com](http://eltako.com)

24/2023 Subject to change without notice.