

Wireless pushbutton encryption rocker



FTVW

The wireless pushbutton encryption rocker FTVW can be used to activate and deactivate the encryption of Eltako wireless pushbuttons, hand-held wireless transmitters and wireless remote control with batteryless and cordless EnOcean wireless modules.

First, remove the rockers. The wireless modules must be removed from wireless mini hand-held transmitters FMH8 and placed on a flat surface.

Activate encryption:

The label **encryption ON** is located on the top side.



Press the encryption rocker on the wireless module and press the rocker twice.


Deactivate encryption:

The label **encryption OFF** on the FTWV is located on the top side.



Press the encryption rocker on the wireless module and press the rocker once.

Teach-in of encryptable EnOcean wireless modules is described in the operating instructions for encryptable actuators.

This is identified by the pictogram .

Must be kept for later use!

Eltako GmbH

D-70736 Fellbach

+49 711 94350000

www.eltako.com