

22 400 601 - 2



# Motor isolating relay MTR12-UC

Only skilled electricians may install this electrical equipment otherwise there is the risk of fire or electric shock!

Temperature at mounting location: -20°C up to +50°C.

Storage temperature:  $-25^{\circ}\text{C}$  up to  $+70^{\circ}\text{C}$ . Relative humidity:

annual average value <75%.

## 2+2 NO contacts not potential free 5 A/250 V AC for one or two 230 V motors. Standby loss 0.5 watt only.

Modular device for DIN-EN 60715 TH35 rail mounting. 1 module = 18 mm wide, 58 mm deen


Universal control voltage 8..230 V UC. 230 V supply voltage.

The tube-mounted motors of shading elements and roller shutters must not be connected in parallel, or reverse voltages will occur through the limit switches, ultimately causing failure of the motors.

For one motor and if the control voltage and the motor voltage are 230 V, one EGS12Z is adequate. Where more than one motor is controlled by an EGS12Z or in case the control voltage is different, one MTR12 must be connected to two motors.


It must be remembered that the MTR12 devices, while they can be operated in parallel, require unassigned contact outputs K2/K3 of the controlling EGS12Z. These have to be connected to terminals K2/K3 of the MTR12. 1/2 = Motor 1, 3/4 = Motor 2.

### Function rotary switch

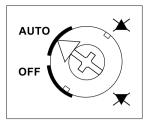

The functions UP and DOWN may be blocked or switched off entirely by a rotary switch. This block applies only to the max. 2 connected motors. Therefore single shading elements or roller shutters can be completely or partially excepted from the automatic function of an over-all control.

## **Typical connection**

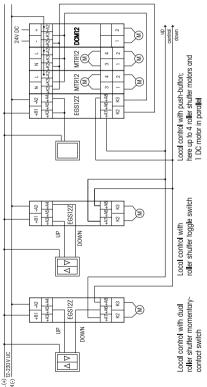

#### Technical data

Contact	AgSn02/0,5 mm
Rated switching	5 A/250 V AC
capacity	
Inductive load	650 W 1)
Switch position indication	LED
Temperature at	+50°C/-20°C
mounting location	

Inductive load  $\cos \phi$  = 0.6 as sum of both contacts 1000 W max.



The strain relief clamps of the terminals must be closed, that means the screws must be tightened for testing the function of the device. The terminals are open ex works.

## Manuals and documents in further languages:



https://eltako.com/redirect/MTR12-UC



## Must be kept for later use!

We recommend the housing for operating instructions GBA14.

## **ELTAKO GmbH**

D-70736 Fellbach

#### Technical Support English:

+49 711 943 500 25

eltako.com

30/2024 Subject to change without notice.