

Navigation



Group view

Start the FVS-Mobile application on your mobile phone and click on "Link" if the link fails to set up automatically. Click on the "FVS-Mobile" button to return to the Start view. The Group view appears. The Group view displays all existing groups. If access to the configuration is released in the user profile of FVS-Home or FVS-Professional software, other settings can be performed using the "Config" button.



Server options

This figure shows the functions in the main view of Eltako FVS-Home or FVS-Professional.



Object overview

Here you see the objects in a group.

You can switch actuators by clicking on the switch icon. You can also regulate the dimmer by clicking and sliding.



PC group view

This figure shows a PC in a PC group.



Control of a PC

You can switch the power supply on or off using the menu button of a PC and boot or shut down the PC. The same applies to the PC group.



Camera image with objects

As standard, the associated objects in this group are displayed under the camera image. The button at the bottom right changes to the camera control panel and the left button returns to the object view.



Camera image

This figure shows the functions provided by the camera. Use the control panel to zoom the image in or out and to change the display zone.