









 
Manuals and documents in further languages: https://eltako.com/redirect/FB55FB-

FB55EB-









The FB55EB- sends a motion-detected telegram every 2 minutes when motion is detected. If no more movement is detected, a non-movement telegram is sent after 4 minutes. If there is still no movement detected, a non-movement telegram is sent every 30 minutes.

In the factory setting, the upper slide switch is set to 'P (passive)', light actuators and dimming actuators switch off automatically if no new movement has been detected for 5 minutes. It is switched on with a button.

With the upper slide switch in position 'A (active)', automatic movement-dependent switch-on is activated. The sensitivity can be selected with the lower slide switch.

'H' = high (factory setting) or 'L' = low.

The power supply is an internal 3 V CR2032 button cell and has a service life of several years. Just remove the front panel to change the button cell.

The wireless sensor can be taught in the actuators listed below and in controller: FSR14, FSR61, FSR71, FTN14, FUD14, FUD61, FUD71, FZK14, FZK61, FD62, FL62, FSLA

FB55EB-am	Wireless motion sensor in E-Design55, anthracite mat	Art. No. 30055513	89,10 €/pc.
FB55EB-pg	Wireless motion sensor in E-Design55, polar white glossy	Art. No. 30055514	89,10 €/pc.
FB55EB-pm	Wireless motion sensor in E-Design55, polar white mat	Art. No. 30055515	89,10 €/pc.
FB55EB-wg	Wireless motion sensor in E-Design55, pure white glossy	Art. No. 30055512	89,10 €/pc.