



Wireless switch with single rocker



Manuals and documents in further languages:  
<https://eltako.com/redirect/FS55E->

## FS55E-



**Wireless switch in E-Design55, 80 x 80 mm outside, frame inside dimensions 55 x 55 mm, 15 mm high. Generates the energy for wireless telegrams itself when a button is pressed, so there is no connection cable and no standby loss.**

This wireless switch can be taught-in as an 'universal pushbutton' in the impulse switch relays of the series 61, 62 and 14. Press the wireless switch up or down, the switching position of the actuator changes each time it is pressed (toggle). If several wireless switches or wireless pushbuttons are taught in together, the wireless switch fulfills the function of a toggle switch.

<b>FS55E-am</b>	Wireless switch without battery or wire in E-Design55, anthracite mat	<b>Art. No. 30000602</b>	<b>53,90 €/pc.</b>
<b>FS55E-pg</b>	Wireless switch without battery or wire in E-Design55, polar white glossy	<b>Art. No. 30055811</b>	<b>53,90 €/pc.</b>
<b>FS55E-pm</b>	Wireless switch without battery or wire in E-Design55, polar white mat	<b>Art. No. 30055812</b>	<b>53,90 €/pc.</b>
<b>FS55E-wg</b>	Wireless switch without battery or wire in E-Design55, pure white glossy	<b>Art. No. 30000601</b>	<b>53,90 €/pc.</b>