



Manuals and documents in further languages:
<https://eltako.com/redirect/FSM60B>

FSM60B



Wireless transmitter module with batteries and antenna rod. L x W x H: 60 x 46 x 30 mm (dimensions excluding antenna and fixing screws).

This wireless transmitter module can be operated by a water sensor FWS60 or a pushbutton and transmits a variety of adjustable wireless telegrams to the Eltako building wireless system.

An internal jumper permits selection between 4 operating modes.

In mode 1 (jumper plugged at Position JP1) wireless telegrams is sent from a wireless pushbutton, such as 'Press double rocker at bottom left'.

In mode 2 (jumper plugged at Position 2) wireless telegrams is sent from a wireless pushbutton, such as 'Press double rocker at top right and bottom right'.

In mode 3 (jumper plugged at Position 3; factory setting) wireless telegrams is sent to EnOcean Standard EEP A5-30-03.

In mode 4 (jumper plugged at Position 4) wireless telegrams is sent to EnOcean Standard EEP A5-30-01.

In modes 3 and 4 a status telegram is also sent every 33 minutes.

The power supply that lasts several years is provided by an internal 3 V button cell CR2032. The charge status of the battery is transmitted in every data and status telegram in mode 4.

Press the internal LRN button **to teach in** the actuator which is ready for teach-in.

Release two screws on the front to remove the cover. When closing, make sure the seal is in the correct position.

An M12 screw is located on the underside to connect the cable.

It is not permitted to activate several wireless transmitter modules at the same time.

FSM60B	Transmitter module with batteries	Art. No. 30000459	76,90 €/pc.
---------------	-----------------------------------	--------------------------	--------------------