




The enclosed small antenna can be replaced with a wireless antenna FA250 or if need be FA200 with magnetic base and cable.

Mode switch

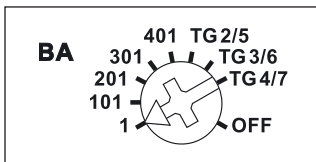

Standard setting ex works.

Housing for operating instructions GBA14 page 1-44.

FTS14FA



Optional: Wireless output module pushbutton telegrams for FTS14 systems with FTS14EM and/or FTS14TG. Only 0.5 watt standby loss.

Modular device for DIN-EN 60715 TH35 rail mounting.
1 module = 18 mm wide, 58 mm deep.

Connection to the Eltako-RS485 bus. Bus cross wiring and power supply with jumper.

Operation in conjunction with FTS14KS with or without FAM14.

A rotary switch defines the FTS14EM or FTS14TG group to which an FTS14FA belongs. Therefore a maximum of 8 FTS14FAs can be connected to a bus. Every pushbutton telegram from an FTS14EM or FTS14TG is sent with its own ID to the Eltako building wireless system.

Rotary switch on the FTS14FA set to position 1: Sends telegrams of all FTS14EMs set to 1.

Rotary switch on the FTS14FA set to position 101: Sends telegrams of all FTS14EMs set to 101.

Rotary switch on the FTS14FA set to position 201: Sends telegrams of all FTS14EMs set to 201.

Rotary switch on the FTS14FA set to position 301: Sends telegrams of all FTS14EMs set to 301.

Rotary switch on the FTS14FA set to position 401: Sends telegrams of all FTS14EMs set to 401.

Rotary switch on the FTS14FA set to position TG2/5: Sends telegrams of all FTS14TG set to 2 or 5.

Rotary switch on the FTS14FA set to position TG3/6: Sends telegrams of all FTS14TG set to 3 or 6.

Rotary switch on the FTS14FA set to position TG4/7: Sends telegrams of all FTS14TG set to 4 or 7.

Rotary switch on the FTS14FA set to position OFF: The FTS14FA is switched off.

The green LED under the rotary switch will flash shortly when a wireless telegram is sent.

Telegrams from an FAM14 are not sent by the FTS14FA.

FTS14FA	Wireless output module	EAN 4010312315101	89,90 €/pc.
---------	------------------------	-------------------	-------------