



The enclosed small antenna can be replaced with a wireless antenna FA250 or if need be FA200 and FAG55E- (see page 1-4).



Function rotary switch

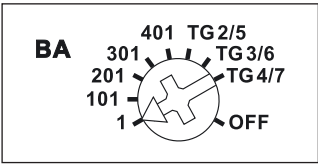

 Standard setting ex works.



Housing for operating instructions
GBA14 page 1-48 chapter 1.

FTS14FA



Wireless output module for FTS14 systems with FTS14EM and/or FTS14TG.
Only 0.5 watt standby loss.

Modular device for DIN-EN 60715 TH35 rail mounting.
1 module = 18 mm wide, 58 mm deep.

Connection to the ELTAKO RS485 bus. Bus cross wiring and power supply with jumper.
Operation in conjunction with FTS14KS with or without FAM14.

A rotary switch defines the FTS14EM or FTS14TG group to which an FTS14FA belongs. Therefore a maximum of 8 FTS14FAs can be connected to a bus. Every telegram from an FTS14EM or FTS14TG is sent with its own ID to the ELTAKO building wireless system.

Rotary switch on the FTS14FA set to position 1: Sends telegrams of all FTS14EMs set to 1.

Rotary switch on the FTS14FA set to position 101: Sends telegrams of all FTS14EMs set to 101.

Rotary switch on the FTS14FA set to position 201: Sends telegrams of all FTS14EMs set to 201.

Rotary switch on the FTS14FA set to position 301: Sends telegrams of all FTS14EMs set to 301.

Rotary switch on the FTS14FA set to position 401: Sends telegrams of all FTS14EMs set to 401.

Rotary switch on the FTS14FA set to position TG2/5: Sends telegrams of all FTS14TG set to 2 or 5 .

Rotary switch on the FTS14FA set to position TG3/6: Sends telegrams of all FTS14TG set to 3 or 6.

Rotary switch on the FTS14FA set to position TG4/7: Sends telegrams of all FTS14TG set to 4 or 7.

Rotary switch on the FTS14FA set to position OFF: The FTS14FA is switched off.

The green LED under the rotary switch will flash shortly when a wireless telegram is sent.

Telegrams from an FAM14 are not sent additionally by the FTS14FA.

FTS14FA	Wireless output module	Art. No. 30014063	95,40 €/pc.
---------	------------------------	-------------------	-------------