 





# FVST

The encryption for the wireless window-door contacts FTKE, the wireless position switch FPE-1 as well as the wireless flat pushbuttons FIFT and FIT can be activated and deactivated with the wireless encryption plug FVST.

**FTKE and FPE**  
**Activate encryption:**

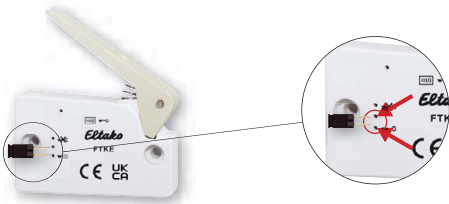


 **FTKE and FPE**  
**Deactivate encryption:**

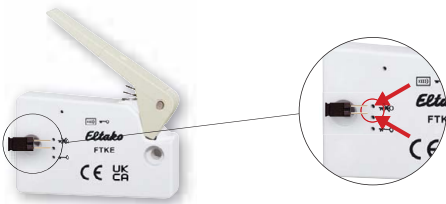


Insert the encryption plug and pull the lever.

 **FIT55E, FIT65 and FIFT65**  
**Activate encryption:**

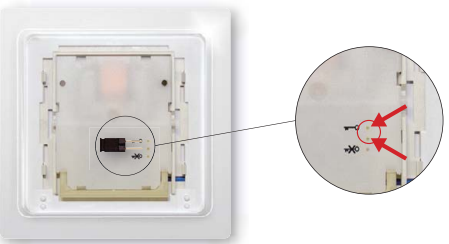

 **FIT55E, FIT65 and FIFT65**  
**Deactivate encryption:**

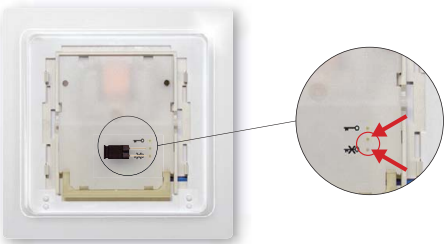

Insert the encryption plug and operate the rocker.

<b>FVST</b>	Wireless encryption plug	<b>Art. No. 30000015</b>	<b>6,67 €/pc.</b>
-------------	--------------------------	--------------------------	-------------------