




**Typical connection**

4-wire-connection 3x230/400 V

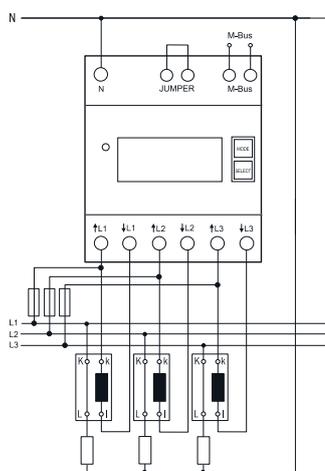

Manuals and documents in further languages:  
[https://eltako.com/redirect/DSZ15WDM-3\\*5A\\_MID](https://eltako.com/redirect/DSZ15WDM-3*5A_MID)

# DSZ15WDM-3x5A MID

MID

**M-bus CT operated three-phase energy meter with settable CT ratio and MID. Maximum current 3x5 A. Standby loss 0.5 watt per path only.**

Modular device for DIN-EN 60715 TH35 rail mounting.  
 4 modules = 70 mm wide and 58 mm deep.  
 Accuracy class B (1%). With M-bus interface.  
 This three-phase meter measures active energy by means of the currents flowing between inputs and outputs. The internal power consumption of 0.5 watt active power per path is neither metered nor indicated.  
**1, 2 or 3 converters with secondary currents of up to 5 A can be connected.**

The inrush current is 10 mA.  
 The N terminal must always be connected.  
**The 7 segment LC display is also legible twice within a period of 2 weeks without power supply.**  
 Power consumption is indicated by an LED flashing at a rate of 10 times per kWh.

On the right next to the display are the MODE and SELECT buttons to browse through the menu. First the **background lighting** switches on. Then the total active energy, the active energy of the resettable memory and the instantaneous values of power, voltage and current are displayed for each outer conductor.  
**The CT ratio can also be set.** It is set to 5:5 at the factory and blocked with a bridge over the terminals which are marked with 'JUMPER'. To adjust the CT ratio to the installed transformer remove the bridge and reset the energy meter according to the operation manual. Then block it again with the bridge. Adjustable current transformer ratios: 5:5, 50:5, 100:5, 150:5, 200:5, 250:5, 300:5, 400:5, 500:5, 600:5, 750:5, 1000:5, 1250:5 and 1500:5.

**Error message (false)**  
 If there is no outer conductor of the current direction is incorrect, 'false' and the related outer conductor are indicated in the display.

- M-bus data transfer**
- On read-out all values are transferred in a telegram.
  - The following telegrams are supported:
    - Initialisation: SND\_NKE Reply: ACK
    - Read out meter: REQ\_UD2 Reply: RSP\_UD
    - Change primary address: SND\_UD Reply: ACK
    - Reset RS1: SND\_UD Reply: ACK
    - Slave selection for the secondary address Reply: ACK

- The device does not reply to unknown requests
- The transfer rate is detected automatically
- The device has a voltage monitor. In case of voltage loss, all registers are saved in the EEPROM.

**Changing the M-bus primary address:**  
 To change the M-bus primary address, hold down SELECT for 3 s. In the menu that appears, press MODE to increment the address by 10. Press SELECT to increment by 1. When the required primary address is set, wait until the main menu reappears.

- Secondary address**
- It is possible to communicate with the energy meters according to the standard EN13757 using the secondary address.
  - The use of wild cards is possible.

For details refer to the operating instructions at [www.eltako.com](http://www.eltako.com).

**Important!**  
 Before working on the current transformers disconnect the voltage paths of the energy meters.

Technical data page 10-28.

<b>DSZ15WDM-3x5A MID</b>	CT operated three-phase energy meter, MID approval	<b>Art. No. 28305515</b>	<b>243,70 €/pc.</b>
--------------------------	--	--------------------------	---------------------