

M-bus three-phase meter for use with CT
DSZ15WDM-3x5A with display and MID approval

**Only skilled electricians may install this electrical equipment
otherwise there is the risk of fire or electric shock!**

Temperature at mounting location: -25°C up to +55°C.
Storage temperature: -25°C up to +70°C.
Relative humidity: annual average value <75%.

**CT operated energy meter with settable CT ratio and MID.
Maximum current 3x5A. Standby loss 0.5 watt per path only.**

Modular device for DIN-EN 60715 TH35 rail mounting.
4 modules = 70mm wide and 58mm deep.

Accuracy class B (1%). With M-bus interface.

This three-phase meter measures active energy by means of the currents flowing between inputs and outputs. The internal power consumption of 0.5 watt active power per path is neither metered nor indicated.

1, 2 or 3 converters with secondary currents of up to 5 A can be connected.

The inrush current is 10 mA. The N terminal must always be connected.

**The 7 segment LC display is also legible twice within a period of 2 weeks
without power supply.**

Power consumption is indicated by an LED flashing at a rate of 10 times per kWh.

On the right next to the display are the MODE and SELECT buttons to browse through the menu. First the background lighting switches on. Then the total active energy, the active energy of the resettable memory and the instantaneous values of power, voltage and current are displayed for each outer conductor.

The CT ratio can also be set. It is set to 5:5 at the factory and blocked with a bridge over the terminals which are marked with 'JUMPER'. To adjust the CT ratio to the installed transformer remove the bridge and reset the energy meter according to the operation manual. Then block it again with the bridge. Adjustable current transformer ratios: 5:5, 50:5, 100:5, 150:5, 200:5, 250:5, 300:5, 400:5, 500:5, 600:5, 750:5, 1000:5, 1250:5 and 1500:5.

Error message (false)

If there is no outer conductor of the current direction is incorrect, 'false' and the related outer conductor are indicated in the display.

M-bus data transfer

■ On read-out all values are transferred in a telegram.

■ The following telegrams are supported:

- | | |
|---|---------------|
| - Initialisation: SND_NKE | Reply: ACK |
| - Read out meter: REQ_UD2 | Reply: RSP_UD |
| - Change primary address: SND_UD | Reply: ACK |
| - Reset RS1: SND_UD | Reply: ACK |
| - Slave selection for the secondary address | Reply: ACK |

■ The device does not reply to unknown requests

■ The transfer rate is detected automatically

■ The device has a voltage monitor. In case of voltage loss, all registers are saved in the EEPROM.

Changing the M-bus primary address:

To change the M-bus primary address, hold down SELECT for 3 s. In the menu that appears, press MODE to increment the address by 10. Press SELECT to increment by 1. When the required primary address is set, wait until the main menu reappears.

Secondary address:

■ It is possible to communicate with the energy meter according to the standard EN13757 with help of the secondary address.

■ The use of wildcards is possible.


Detailed information are available in the operating manuals at www.eltako.com

Important! Before working on the current transformers disconnect the voltage paths of the energy meters.

Typical connection:

4-wire-connection 3x230/400V

The secondary current converter terminals on the mains side must be connected to the outer conductors measured. These connections for the meter power supply must be protected according to local installation regulations.

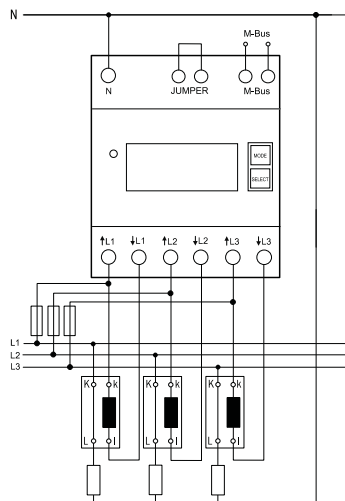

Technical data


Rated voltage, extended range	3x230/400V, 50Hz, -20%/+15%
Reference current I_{ref} (Limiting current I_{max})	3x0.05 - 5(6)A
Internal consumption active power	0.5W per path
Display	LC display 7 digits, therefrom 1 digit after the decimal point
Accuracy class $\pm 1\%$	B
Inrush current according to accuracy class B	10mA
Operating temperature	-25/+55°C
Bus system	M-Bus
Bus length	According to M-bus specifications
Transfer rates	300, 2400, 9600 baud.
Response time (system response time)	Write up to 60ms Read up to 60ms
Terminal cover sealable	Terminal cover claps
Protection degree	IP50 for mounting in distribution cabins with protection class IP51
Maximum conductor cross section ¹⁾	N and L terminals 16mm ² , M-Bus terminals and jumper terminals 6mm ²
Recommended torque ²⁾	L- and N terminals 1,5Nm (max. 2,0Nm) M-Bus terminals and jumper terminals 0,8Nm (max. 1,2Nm)
EC type examination certificate	0120/SGS0314
The energy meter is used indoors.	
Mechanical environmental conditions	class M1
Electromagnetic environmental conditions	class E2

¹⁾ The carrying capacity of cables and wires is defined in DIN VDE 0298-4.

²⁾ The torques for screw terminals are mentioned in DIN EN 60999-1.

To avoid damages at the energy meter, the recommended torque values for each terminal must not be exceeded!

Menu guidance

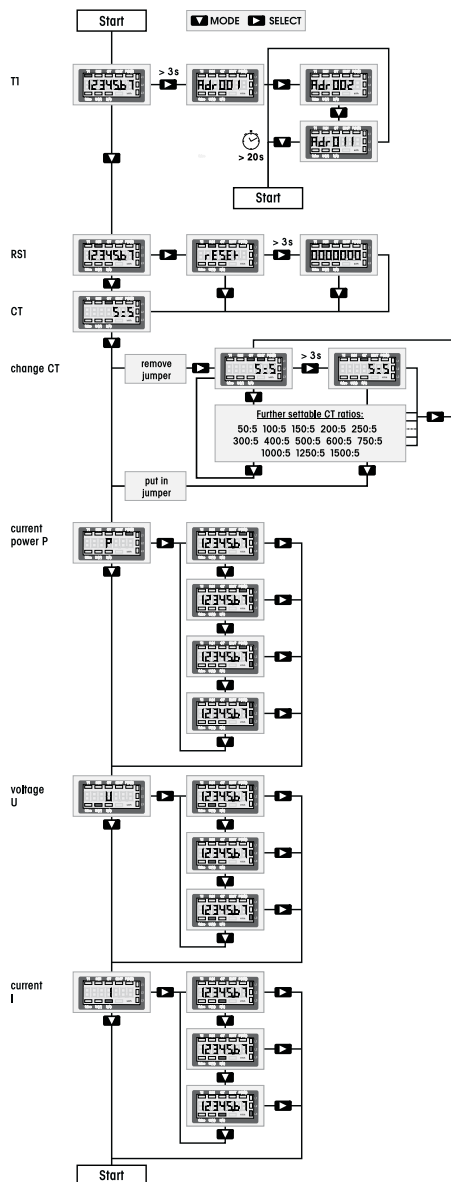

EC DECLARATION OF CONFORMITY

File name	FQKZ059-CR
Product	Calibrated electronic M-bus three-phase energy meter with MID approval CT operated energy meter with settable CT ratio
Type designation	DSZ15WDM-3x5A
EC-type examination certificate	0120/SQS0314

The manufacturer herewith declares, on his own responsibility that the designated products which this certificate refers to, are in accordance with the following harmonized standards or normative documents as well as with the following Directives of the European Parliament and of the Council (relevant version):

DIN EN 50470	parts 1 and 3 : May 2007 (electronic meters)
2014 / 32 / EU	measuring instruments
2014 / 30 / EU	electromagnetic compatibility
2011 / 65 / EU	restriction of the use of certain hazardous substances (RoHS Directive)

The designated products are placed on the market by ELTAKO GmbH,
Hofener Straße 54, 70736 Fellbach, Germany.

Notified body SGS United Kingdom Limited, No. 0120
Unit 202B Wolve Parkway, Weston-super-Mare, BS22 6WA, UK

Manufacturer: Shenzhen Changren Technology Co. Ltd.
Building 33, No.3 Industrial Area, Mashantou, Gongming Street,
New Guangming District, Shenzhen City, Guangdong Province, 518106, China

Place, Date Shenzhen, 02 January 2018

Signature _____



This declaration proves the compliance with the above-mentioned EC Directive, but it does not include any assurance of properties.
Security advices of the provided product information have to be noticed.

Must be kept for later use!

We recommend the housing for operating instructions GBA12.

Eltako GmbH

D-70736 Fellbach

Technical Support English:

 +49 711 94350025

✉ technical-support@eltako.de

eltako.com

23/2020 Subject to change without notice.