

Powerline TLZ actuator

PL-SAM1LT



Only skilled electricians may install this electrical equipment otherwise there is the risk of fire or electric shock!

Temperature at mounting location:

-20°C up to +50°C.

Storage temperature: -25°C up to +70°C.

Relative humidity:

annual average value <75%.

Powerline TLZ (staircase time switch) actuator with 1 channel. 53x43mm, 25mm deep for mounting in 58mm switch boxes. Off delay settable from 1 minute to 120 minutes. Switch-off early warning settable. 1 NO contact not potential free 10A/250V AC, incandescent lamps 2000 watts. Sensor input 230V. Standby loss only 0,5 watt. To control and switch at the same place.

Two rotary switches are located on the front for address assignment:

The left rotary switch defines the group address g with 16 alphabetical values from A to P.

The right rotary switch determines the off-delay time.

Above it is a slide switch which acts as a configuration switch with positions 0, 1 and 2.

Position 0: Pushbutton at sensor input with subsequent switching.

Position 1: Same as Position 0 but with switch-off early warning.

Position 2: A change-over switch is evaluated as a pushbutton.

To the left of the rotary switches is a red LED which indicates all activities.

Next to it is a reset pushbutton and to the right of that is a service pin.

The terminals located above are plug-in terminals for conductor cross-sections of 0.2 mm² to 1.5 mm².

Address assignment:

The left rotary switch defines the group address **g** with 16 alphabetical values from A to P.

The address **e** is fixed with **e = 15**. Accordingly, the address **e = 15** (or **e = 0**) must be set with associated power line elements.

Any number of devices (actuators/sensor inputs) can have the same **g** and **e**.

All actuators with the same **g** and **e** are switched together.

Addresses can be changed at any time (when power is applied or not applied).

The right rotary switch is used to set the RV time with the following values:

1 = 1 min, 2 = 2 min, 3 = 3 min,
4 = 5 min, 5 = 8 min, 6 = 10 min,
7 = 12 min, 8 = 15 min, 9 = 20 min,
10 = 25 min, 11 = 30 min, 12 = 45 min,
13 = 60 min, 14 = 90 min, 15 = 120 min.

In position 0 no RV time is active.

Start-up:

First installation:

Powerline devices are unconfigured in as-delivered state.

1. Switch off the main fuse.
2. Assign the device addresses (actuators/sensor inputs) by using the rotary switches and fitting all the devices.
3. Switch on the main fuse. **The LEDs of the unconfigured devices flicker.**
4. Press the pushbutton (switch) of an unconfigured device (actuator/sensor input) 5 times (10 times) within 5 seconds to generate a new domain (home address). After 5 seconds, all the existing devices in the new domain (home address) are integrated and functioning. **The LEDs of the configured devices are off.**

Extending the installation:

1. Switch off the appropriate fuse.
2. Assign the addresses of the new devices (actuators/sensor inputs) by using the rotary switches and fitting all the new devices.
3. Switch on the main fuse. **The LEDs of the unconfigured devices flicker.**
4. Press the pushbutton (switch) of a **previously installed and configured** device 5 times (10 times) within 5 seconds. The actuator/sensor input

transfers its domains (home address) to the new devices. **The LEDs of the configured devices are off.**


Reset to as-delivered state:

With the mains voltage applied, use a small insulated screwdriver to hold down the **Reset** pushbutton for at least 5 seconds. The LED first lights up and flickers after 5 seconds. The as-delivered state is restored.

Send node ID:

Use a small insulated screwdriver to briefly press Service Pin **P**. The Powerline node ID is sent.

Typical connection

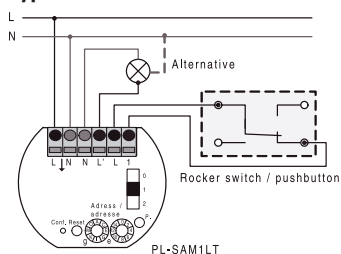

Must be kept for later use!

Eltako GmbH

D-70736 Fellbach

Technical Support English:

Michael Thünte +49 176 13582514

thuent@eltako.de

Marc Peter +49 173 3180368

marc.peter@eltako.de

eltako.com