



Tap-radio® light actuator

TF61L-230V

**Only skilled electricians may install this electrical equipment otherwise there is the risk of fire or electric shock!**

Temperature at mounting location:

-20°C up to +50°C.

Storage temperature: -25°C up to +70°C.

Relative humidity:

annual average value &lt;75%.

**valid for devices from production week 27/16** (see bottom side of housing)

Wireless light actuator 10A/250V AC.

Impulse switch with NO contact, not potential free. 230V incandescent lamps and halogen lamps 1000W, ESL and 230V LED lamps up to 200W. Standby loss only 0.8 watt.

For installation.

45mm long, 45mm wide, 18mm deep.

Up to 24 wireless universal pushbuttons, wireless direction pushbuttons, wireless central control pushbuttons and motion sensors TF-BSB as well as bidirectional wireless can be taught in using easy tap-radio® technology.

### Zero passage switching.


Bidirectional wireless switchable.

Supply voltage, switching voltage and control voltage local 230V.

If supply voltage fails, the device is switched off in defined mode.

In addition to the wireless control input via an internal antenna, this tap-radio® actuator can also be controlled locally by a conventional 230V control switch if fitted previously. Glow lamp current is not permitted.

### Typical connection

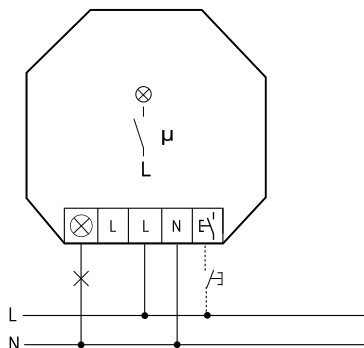

### Start-up:

After you switch on the power supply, the teach-in mode is automatically active for 2 minutes provided the memory content is empty (as-delivered state) and/or the teach-in mode is not blocked.

Readiness for teach-in is indicated by briefly switching the load on/off.

### Teach in wireless pushbutton:

**Universal pushbutton:** tap briefly 3 times;

**Direction pushbutton:** tap briefly 4 times; direction pushbutton teach-in is fully automatic when the pushbutton is tapped. Where you tap is then defined as switch-on. The other side automatically becomes switch-off.

**Central control pushbutton on:** tap briefly 5 times;

**Central control pushbutton off:** tap briefly 6 times;

### Wireless motion sensor TF-BSB:

teach-in telegram 0x1C080D80;

**GFVS:** teach-in telegram 0xE0400D80; this automatically switches on confirmation telegrams and blocks the teach-in mode.

Teaching-in a pushbutton, is confirmed by briefly switching the load on/off. The teach-in mode is then active for a further 2 minutes.

**To prevent unintentional teach-in, the teach-in mode is automatically blocked 2 minutes after the last teach-in. This is indicated by the load switched on/off briefly twice.**

### Block teach-in mode immediately:

Tap 3 times briefly and once long (>1 second) on a wireless pushbutton (not central control pushbutton) that is already taught in or the local pushbutton. A block is indicated by switching the load on/off twice briefly.

### Unblock teach-in mode:

1. Switch power supply off/on.

2. Tap 4 times briefly and once long (>1 second) on a wireless pushbutton already taught in (not a central command pushbutton) or the local pushbutton.

Readiness for teach-in is indicated by briefly switching the load on/off.

3. Apply on 'Teach in wireless pushbutton'.

### Clear memory content completely (restore as-delivered state):

1. Switch power supply off/on.

2. Tap 8 times briefly and once long (>1 second) on a wireless pushbutton already taught in (not a central command pushbutton) or the local pushbutton.

Clear is indicated by switching the load on/off briefly.

3. Apply on 'Teach in wireless pushbutton'.

### Switch on/off confirmation telegrams:

1. Switch power supply off/on.

2. Tap 7 times briefly and once long (>1 second) on a wireless pushbutton already taught in (not a central command pushbutton) or the local pushbutton.

ON is indicated by switching the load on/off briefly twice.

OFF is indicated by switching the load on/off briefly once.

### Semi-automatic motion detection with taught-in TF-BSB wireless motion sensor (factory setting):

Press the pushbutton to switch on. This starts a release delay time of 5 minutes during which the device switches on again if motion is detected. When motion is no longer detected, the device switches

off automatically after 5 minutes. The actuator then responds to motion for a further 5 minutes before switching off automatically. After this time expires, the device must be switched on again by pressing the pushbutton. The device can be switched off at any time by pressing the pushbutton, but then motion is no longer detected.

### Fully automatic motion detection with TF-BSB taught-in wireless motion sensor:

If the actuator is not to switch on automatically when motion is detected, e.g. in rooms without daylight, replug the jumper to 'active' on the TF-BSB device. When motion is no longer detected, the device switches off automatically after the 5 minute release delay time expires. Press the pushbutton at any time to switch the device on or off. When motion is detected, the device switches on again automatically.

**ELTAKO GmbH hereby declares that the products that relates to this operating manual, are in compliance with the essential requirements and other relevant provisions of directive 1999/5/EC. A copy of the EU declaration of conformity can be requested at the address below.**

**Must be kept for later use!**

### Eltako GmbH

D-70736 Fellbach

### Technical Support English:

☎ Michael Thünte +49 176 13582514

✉ thunte@eltako.de

☎ Marc Peter +49 173 3180368

✉ marc.peter@eltako.de

eltako.com

27/2016 Subject to change without notice.