

EASY ENERGY MANAGEMENT


Photovoltaic systems are a convenient and sustainable way of generating energy. In order to use the energy generated efficiently, good management is important. Since purchasing energy from the grid operator is more expensive than feeding excess energy into the public grid, it makes sense to use or store as much as possible yourself.

The MFSR12DX is a device that can be installed in conjunction with a DSZ15DZ-3x80A MID or in conjunction with an AIR IR scanner connected to existing compatible meters.


It has an individually adjustable switch-on and switch-off power value, so that consumers can be switched on with an adjustable amount of energy, for example to charge an electric car or heat up a boiler. The switch-off delay prevents the power supply from being cut off if it is cloudy for a short period of time.





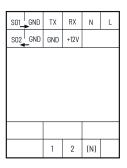

Function rotary switches



Housing for operating instructions GBA14 page 1-50, chapter 1.

MFSR12DX-230V







Multifunction current relay for two-way three-phase meters with two SO outputs or IR interface according to IEC 62056-21. 1 NO contact potential free 16 A/250 V AC, with DX technology. Standby loss 0.6 watt only.

Modular device for DIN-EN 60715 TH35 rail mounting. 3 modules = 54 mm wide, 58 mm deep.

This current relay either evaluates the data of a balancing two-way three-phase meter, e.g. DSZ15DZ-3x80A with two S0 interfaces, or that of an electronic household meter (eHZ-EDL) with IR interface according to IEC 62056-21 and SML protocol version 1.

The data for the power consumed (\rightarrow) and the power supplied (\leftarrow) are recorded, evaluated and a relay contact is switched on or off according to the settings.

With the patented ELTAKO Duplex technology (DX) the normally potential-free contact can still switch in zero passage when switching 230 V AC 50 Hz and therefore drastically reduce wear. Simply connect the neutral conductor to the terminal (N) for this. This results in an standby consumption of only 0.1 watt. Supply voltage 230 V. If the supply voltage fails, the switching status is retained. When the supply voltage returns, it is defined switched off.

S0 inputs S01 (consumed power \rightarrow) and S02 (delivered power \leftarrow)

The SO pulses/kWh of the electricity meter used are set with the respective rotary switch. Adjustable values are 10, 100, 200, 500, 800, 1000, 2000 lmp/kWh.

AIR input (OBIS codes according to IEC 62056-61)

With the rotary switch AIR (BA) you can choose between the following operating modes:

- 1: Purchase totalizer (1.8.0) and reference power on channel 1, supply totalizer (2.8.0) and supply power on channel 2.
- 2: Purchase of tariff 1(1.8.1) and tariff 2(1.8.2) and reference power on channel 1, supply of tariff 1(2.8.1) and tariff 2(2.8.2) and supply of power on channel 2.
- 3: Import tariff 1(1.8.1) and tariff 2 (1.8.2) and import power on channel 1, supply totalizer (2.8.0) and supply power on channel 2.
- 4: Purchase totalizer (1.8.0) and reference power on channel 1, supply tariff 1(2.8.1) and tariff 2 (2.8.2) and supply power on channel 2.

If no AIR is used, the rotary switch must be set to the right stop.

The connection is made using an IR scanner AIR. The IR scanner is fixed with its fastening magnet over the IR output of the meter and connected with its connection cable to the Rx, GND and ± 12 V terminals.

Setting the switching threshold for the reference power (kW grid ightarrow)

The switching threshold at which the relay should switch off is set with the rotary switch (kW Grid \rightarrow). The adjustable values for the power are 0, 0.5, 1, 2, 3, 5, 7, 9, 11, 22 kW.

Setting the switching threshold for the delivery power (kW grid \leftarrow)

The switching threshold at which the relay should switch on is set with the rotary switch (kW Grid \leftarrow). The adjustable values for the power are 0.2, 0.5, 1, 2, 3, 5, 7, 9, 11, 22 kW.

Functionality: Turn on relay contact 1-2

When the set power for the energy supply (\leftarrow) is reached, the **response delay time (AV)** begins, which can be set between 0, 1, 3, 5, 10, 15, 30, 60, 90, 120 minutes with the rotary switch (AV). The red LED behind the rotary switch (AV) flashes as long as the AV time is running. At the end of the AV time, the relay contact switches on if the power (kW) has not fallen below the set switching threshold again. The red **STATUS** LED lights up as long as the relay contact is closedist.

Switching off relay contact 1-2

When the set power for the energy consumption (\rightarrow) is reached, the **off-delay time (RV)** begins, which can be set between 0, 1, 3, 5, 10, 15, 30, 60, 90, 120 minutes with the rotary switch (RV).

The red LED behind the rotary switch (RV) flashes as long as the RV time is running. At the end of the RV time, the relay contact switches off if the power (kW) has not fallen below the set switching threshold again. The red STATUS LED goes out when the relay contact is open.

Manuals and documents in further languages: https://eltako.com/redirect/MFSR12DX-230V	MFSR12DX-230V	Multifunction current relay for two-way three- phase meters	Art. No. 22100530	79,80 €/pc.
Manuals and documents in further languages: https://eltako.com/redirect/DSZI5DZ-3*80A_MID	DSZ15DZ-3x80A	Two-way three-phase meter, MID calibrated	Art. No. 28480315	210,90 €/pc.
Manuals and documents in further languages: https://eltako.com/redirect/AIR	AIR	IR scanner for energy meters	Art. No. 30000970	111,10 €/pc.

Recommended retail prices excluding VAT.



+49 711 943 500 00 eltako.com

Technical support:

+49 711 943 500 25 \times technical-support@eltako.de

Commercial support:

= +49 711 943 500 00 ⊠ export@eltako.de